
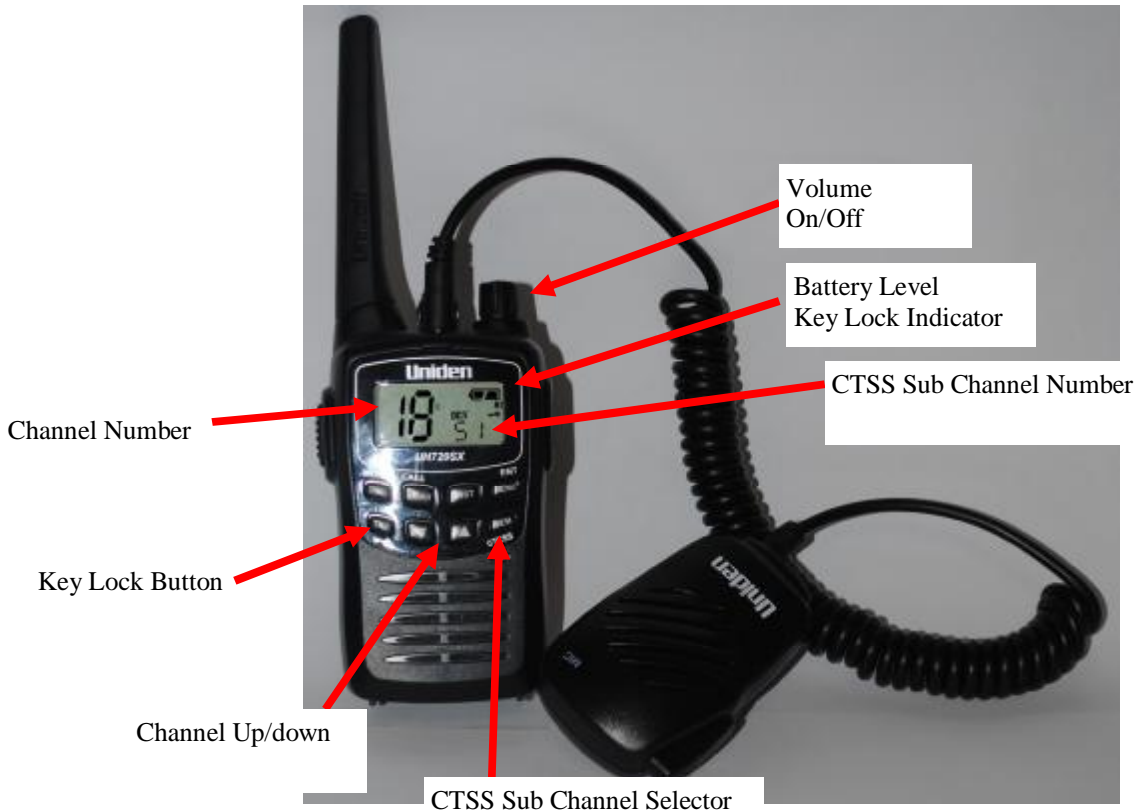


Uniden UH720SX

Basic Operation Guide

Version 1.0—March 2011

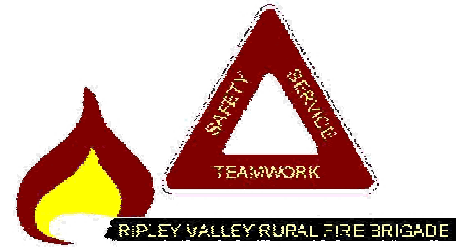

- The new UH720SX is a high Powered (2 Watt) hand held portable UHF CB radio. The unit has 38 primary channels with 104 DCS (Digital Coded Squelch) sub channels.
- For ease of operation the Brigade has decided to operate on the following channels:

Appliance	Primary Channel	DCS Sub Channel
Unit 51	18	51
Unit 52	18	52
Unit 81	18	81
Unit 41	18	41

Operation

- Turn the unit on by twisting the volume knob to the desired volume.
- The unit should be automatically locked and programmed to the correct primary and sub-channel.
- **To adjust the Primary channel follow these steps:**
 1. Press and hold the “key lock” button for 3 seconds
 2. Change the channel by pressing the “up and down” buttons
 3. Press and hold the “key lock” button for 3 seconds to lock the unit again.
- **To adjust the Sub channel follow these steps:**
 1. Press and hold the “key lock” button for 3 seconds
 2. Press and hold the “CTSS Sub-channel selector” button for 3 seconds until the sub channel number flashes
 3. Change the sub-channel by pressing the “up and down” buttons
 4. Press and hold the “CTSS Sub-channel selector” button to confirm
 5. Press and hold the “key lock button” for 3 seconds to lock the unit